




COTTAGE CRAFT SPIRALS

LANDING PLATE FIXING INSTRUCTIONS

PLAN VIEW

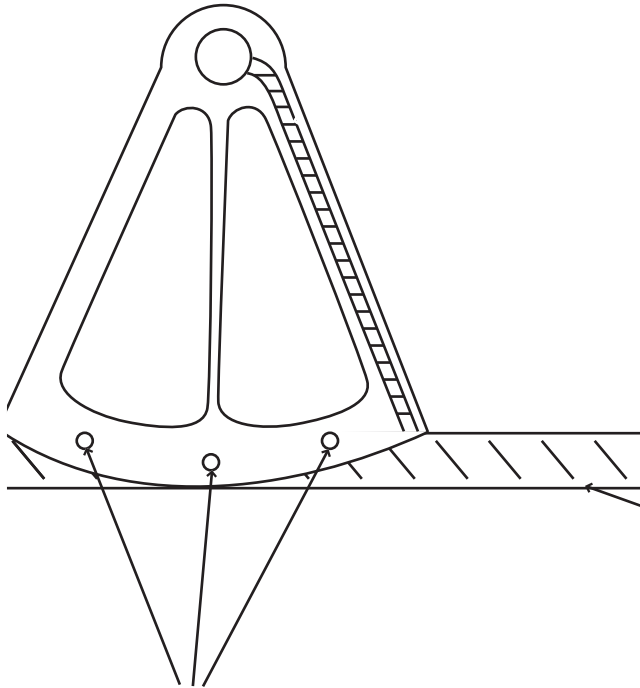

Handrail section to protect back of plate (ordered separately to plate)

The back of the landing plate is left undrilled so that accurate baluster configuration can be calculated on site. To fix balusters either drill plate with 15mm bit and fasten baluster with 1/2" whit nut or tap plate for 1/2" whit and screw in baluster. Cut off excess threaded rod

Joist at edge of landing

Drill holes in plate and fix with 12mm coach bolt or nut and bolt to joist

SECTION VIEW

