





# COTTAGE CRAFT SPIRALS

## SUGGESTED FIX FOR LANDING BALUSTRADE

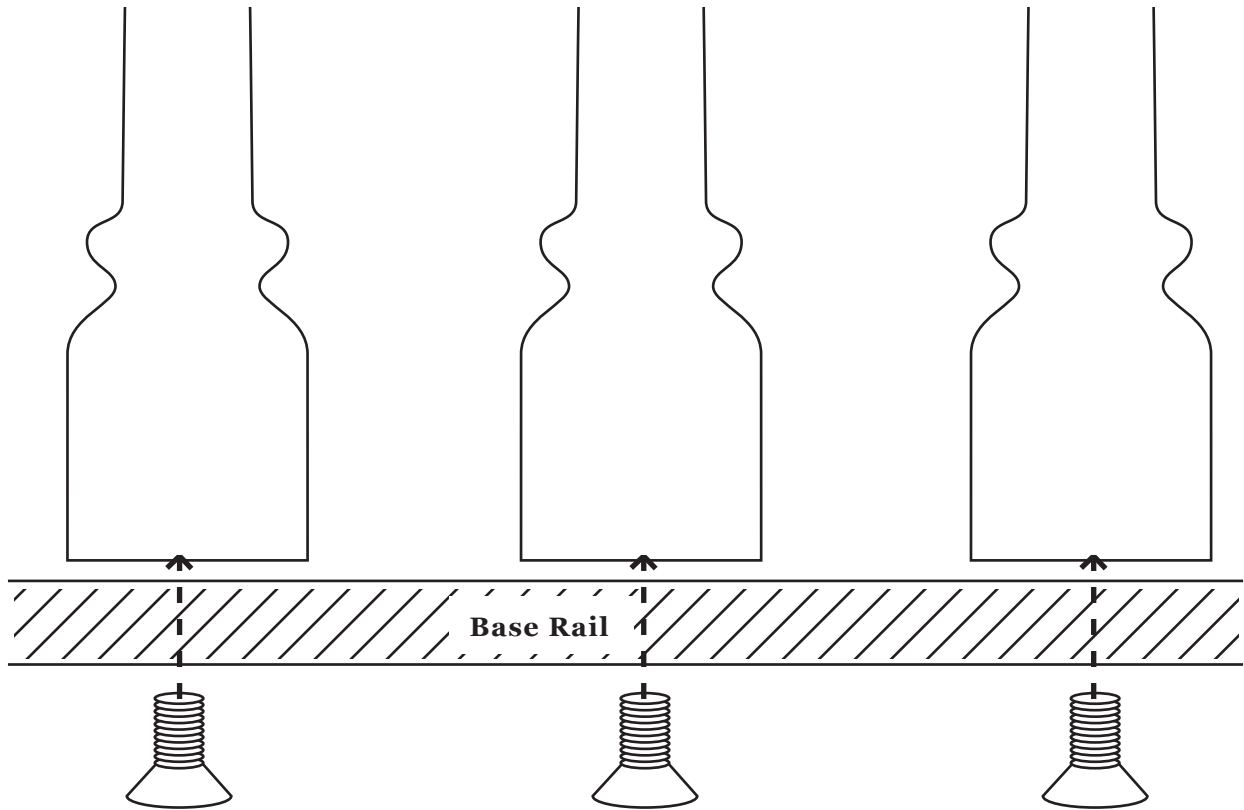

Screw balusters to base rail before fixing the base rail to the floor. The balusters are pre-drilled and tapped to take an 8mm counter sunk bolt (supplied).  
 If your staircase is outside then your balustrade will be spaced of the finished floor 90mm

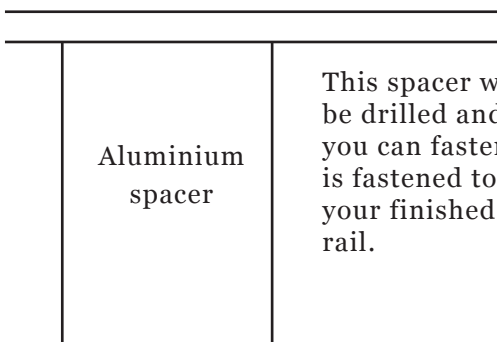

Aluminium spacer

This spacer will be 32mm aluminium, it will be drilled and tapped 8mm in one end so you can fasten your base rail to it. When it is fastened together the spacer will sit on your finished floor and support your base rail.

Before you fix all your balustrade to the floor you will need to drill some fixing holes in the base rail. If you drill a countersunk hole every third space this will be enough to hold it securely to the floor.

